



integration with integrity

User's Manual

Mini-ITX Motherboard 2807880

Version 1.0, February 2008

---

---

## **Copyrights**

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages. The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

## **Trademarks**

Intel is a registered trademark of Intel Corporation.

Award is a registered trademark of Award Software, Inc.

All other trademarks, products and or product's name mentioned herein are mentioned for identification purposes only, and may be trademarks and/or registered trademarks of their respective companies or owners.

---

# Packing List

---

Please check package component before you use our products.

- ☆ 2807880 Mini-ITX Motherboard
- ☆ Quick Installation Guide
- ☆ CD for manual and drivers
- ☆ Cable Kit (CPU cooler, IDE cable, Serial ATA cable, Serial Port cable, I/O Shield, Power cable)

# Table Of Contents

## General Information

< Introduction >.....	6
< Specification>.....	7
< Block Diagram>.....	10
<Mechanical Drawing >.....	11

## Hardware Installation

<Connector Location>.....	13
< List of Connectors >.....	15
<Jumper Locations>.....	17
< List of Jumpers>.....	18
< Jumpers Setting>.....	19
< LVDS Panel Voltage Selection ( JP1 ) >.....	19
< Clear CMOS Selection ( JU5 ) >.....	19
<COM2 RS232/422/485 Slection ( JP3, JP2 )>.....	20
<LVDS Connector ( CN2 )>.....	22
< VGA & AUDIO Connector ( CN5 )>.....	24
< GPIO Connector ( CN6 ) >.....	24
< COM3 RS-232 Connector ( CN8 ) >.....	25
< COM4 RS-232 Connector ( CN9 )>.....	25
< Front Panel Connector ( CN10 ) >.....	25
< PS2 KB/ MS Connector ( J5 ) >.....	27
< CPU Fan Connector ( J7 ) >.....	27
< System Fan Connector ( J8 ) >.....	27
< ATX Power Connector ( J9 ) >.....	20
< Slim Floppy Connector ( J11 ) >.....	28
< COM1 RS-232 Connector ( COM1 Down ) >.....	28
< COM1 RS-232 Connector ( COM1 Up )>.....	29

< USB1 Connector ( USB1 ) >.....	29
< USB2 Connector ( USB2 ) >.....	29
< CompactFlash Slot ( CFD1 ) >.....	30
< Mini - PCI Slot ( MPC11 ) >.....	30
<PCI-E Gigabit LAN / USB Connector ( RJUSB1 A / B )>.....	30
<PCI-E Gigabit LAN / USB Connector ( RJUSB1 A / B ) >.....	30
<SATA1 Connector ( SATA1 ) >.....	30
<SATA2 Connector ( SATA2 ) >.....	30

## Appendix

<Watch Dog timer Setting > .....	32
----------------------------------	----

# General Information

## Introduction

The 2807880 Mini – ITX board incorporates the ATI RS690E + ATI RS600chipset, supports the AMD Turion 64 / Sampron uPGA 638 Pin processors with 800 MHz Front Side Bus (FSB), The RS690E integrates an ATI RADEON X-1250-based 2D/3D graphics engine, dual display, The SB600 is a south bridge that integrates key I/O, communications, and audio features. The board supports DDRII 667MHz system memory, PCI interface, PCI-E Gigabit LAN, Audio, LVDS, DVI Compact Flash, Mini – PCI, Serial ATA, USB 2.0, COM, IEEE 1394.

## Multimedia Applications

For multimedia application solution, ATI RS690E chipset provides on board high performance graphics, 24 – bit LVDS interface, DVI and Audio function. This feature will be good of use in very requirement of the multimedia application.

## Widely Expanded Interface

The board provides PCI slot, you can add a third LAN port, and also provides Mini – PCI slot and Compact Flash Type II slot.

# Specification

Board	2807880 Mini - ITX
CPU	AMD Mobile Turion 64x2 638-pin Processor Sempron 638-pin Processor
Chipset	AMD RS690E + SB600
Memory	2 DDR II SoDIMM slot support DDR II 533 / 667 MHz SDRAM Up to 4GB
VGA	Built in AMD RS690E chipset
I / O Control	AMD SB600 + ITE 8712 + Fintek F81216D
LAN	2 Realtek RTL8111B 10 / 100 / 1000Mbit PCI-Express Giga LAN
Audio	AMD SB600 with Realtek ALC655 Codec
IDE	1 44Pin UDMA 33 connection
SATA	2 Serial ATA II 3.0 Gbit/sec ports
Slot	1 Mini – PCI slot 1 CompactFlash slot 1 PCI slot
BIOS	AMI 4Mb PnP Flash
GPIO	16 – bit digital I / O
Green Function	ACPI 1.0 and APM 1.2 compliant
Watchdog Timer	System reset programmable watchdog timer with 1 ~ 255 sec. of time - out
H / W Monitoring	ITE 8712 support power supply voltage and temperature monitoring functions
Real Time Clock	AMD SB600 built – in RTC with Lithium battery
Form Factor	Mini – ITX 6.69" ( L ) x 6.69" ( W ) / 17 x 17 mm

# VGA Display

---

Chipset	AMD RS690E chipset
Memory	Shared system memory up to 256M
Display	CRT / LCD monitor with analog for 24 – bit LVDS interface
DVI	Support DVI display

---

## Internal I/O Ports

---

GPIO	1 GPIO Port Connector
USB	2 USB Connector Supports 4 USB ports
Serial Port	2 RS-232 Connector, COM3 with 5V power COM4 with 12V power
CDIN	1 CDIN Connector
Audio	1 Audio Connector
IEEE1394	1 IEEE 1394 Connector
IDE	1 44-Pin IDE Connector
LVDS	1 24-Bit LVDS Connector
Inverter	1 LCD Inverter Connector
DVI	1 DVI
FAN	2 FAN Connector

---

## External I/O Ports

---

Keyboard/ Mouse	1 PS / 2 ports
Serial Ports	1 external RS–232 port ( COM 1 ) with 5V power 1 external RS–232 / 422 / 485 port ( COM 2 ) with 12V power
VGA	1 VGA port
Audio	1 external jack for MIC – In / Line – In / Line – Out
LAN	2 external RJ – 45 ports with LED
USB	4 external USB 2.0 ports

---

# Power And Environment

---


POWER	ATX 20-Pin power connector OR 8~21V full range 4 –Pins DC adapter
-------	--

---


TEMPERATURE	Operating temperature with 0°C~60°C (32°F~140°F) Storage temperature with 20°C~80°C (-68°F~176°F)
-------------	--

---


## 1.3 <Block Diagram>

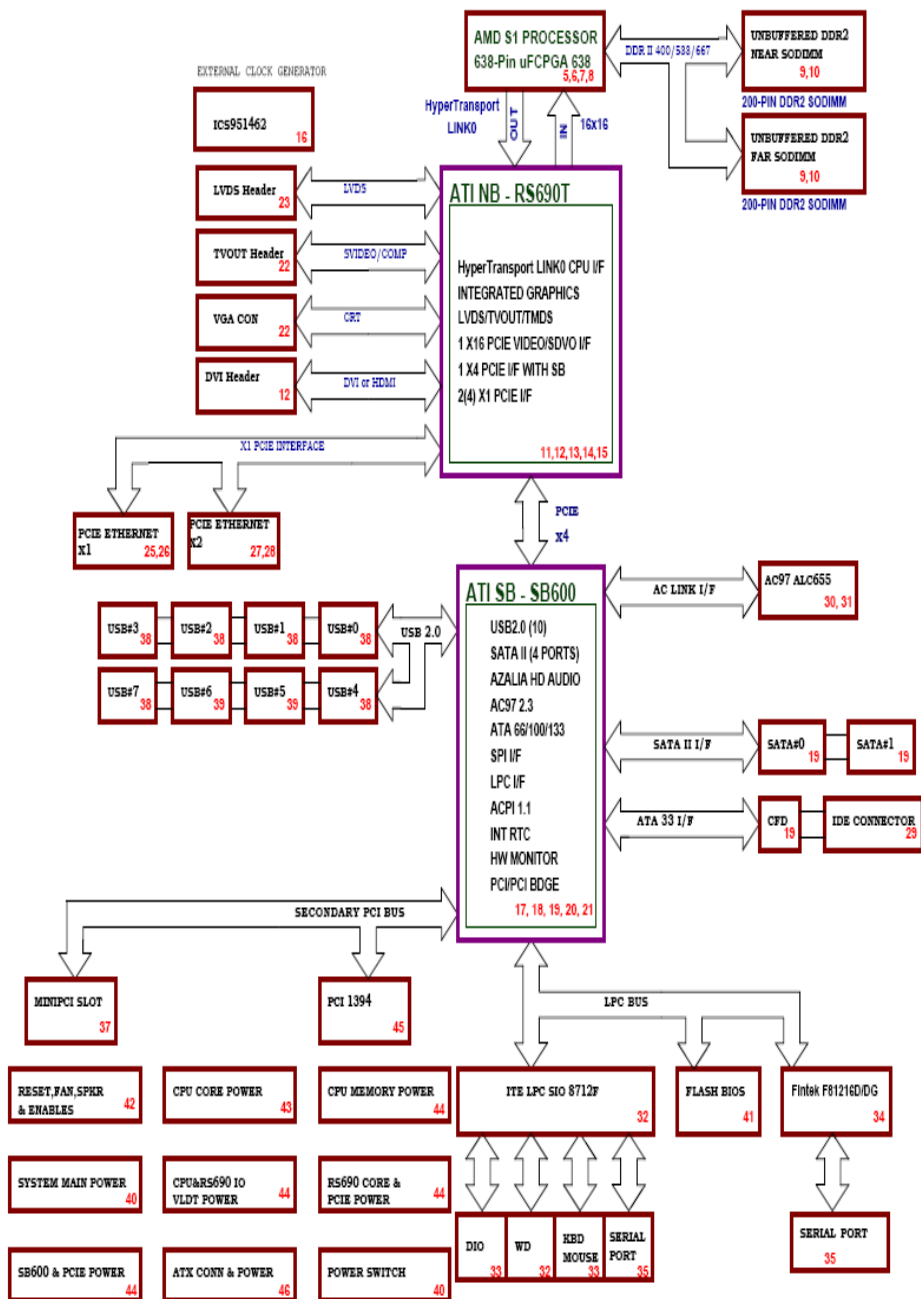

## 1.4 <Mechanical Drawing >

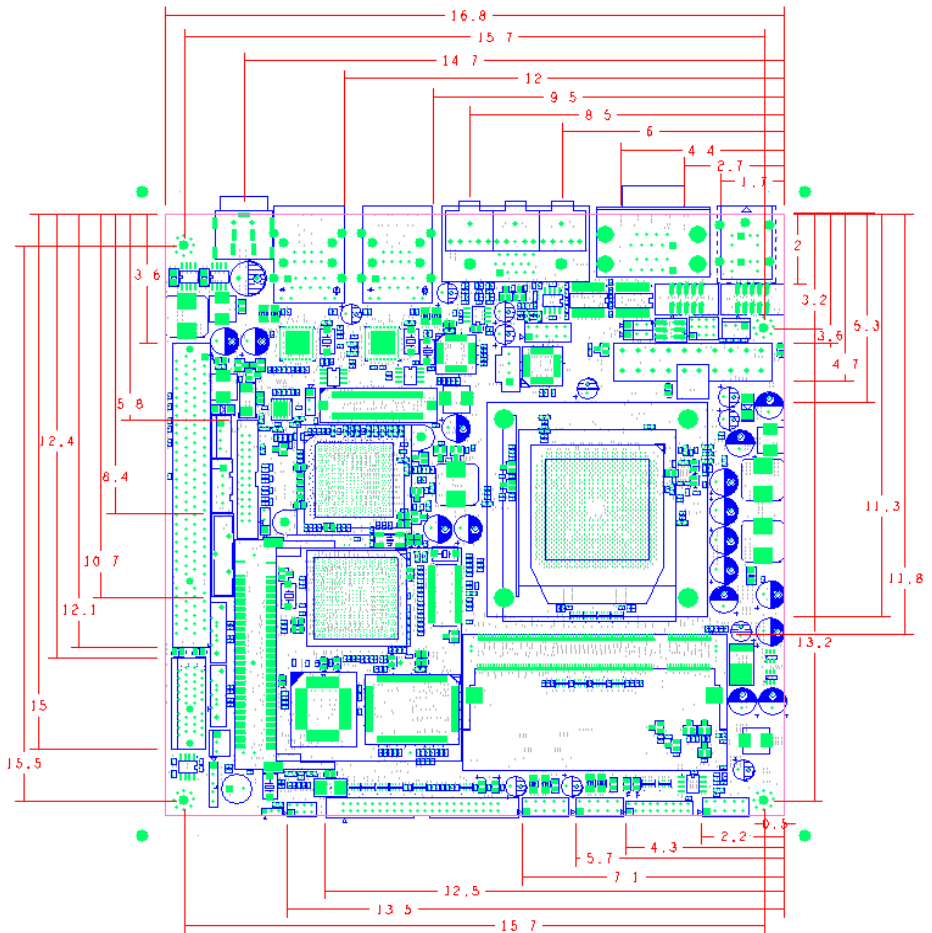


# Solder Side

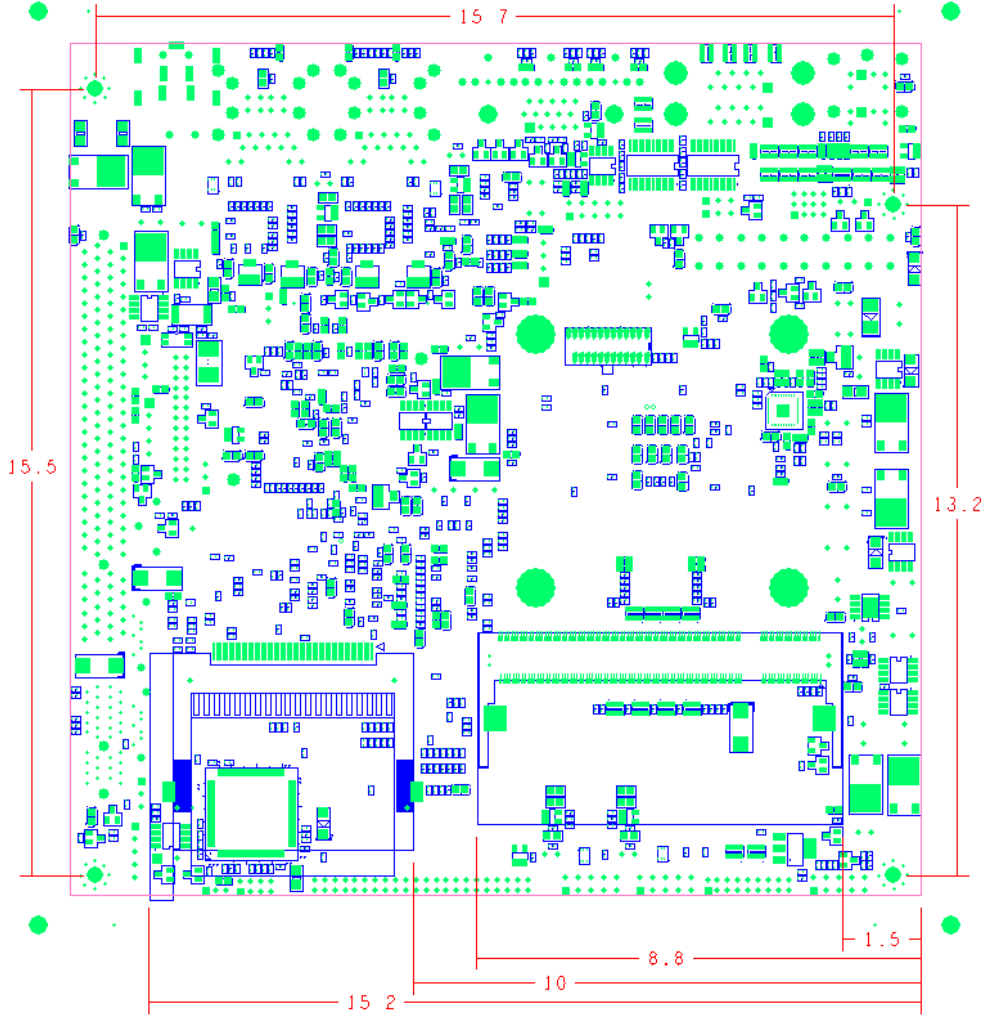


# Hardware Installation

## Connectors Location

### Component Side

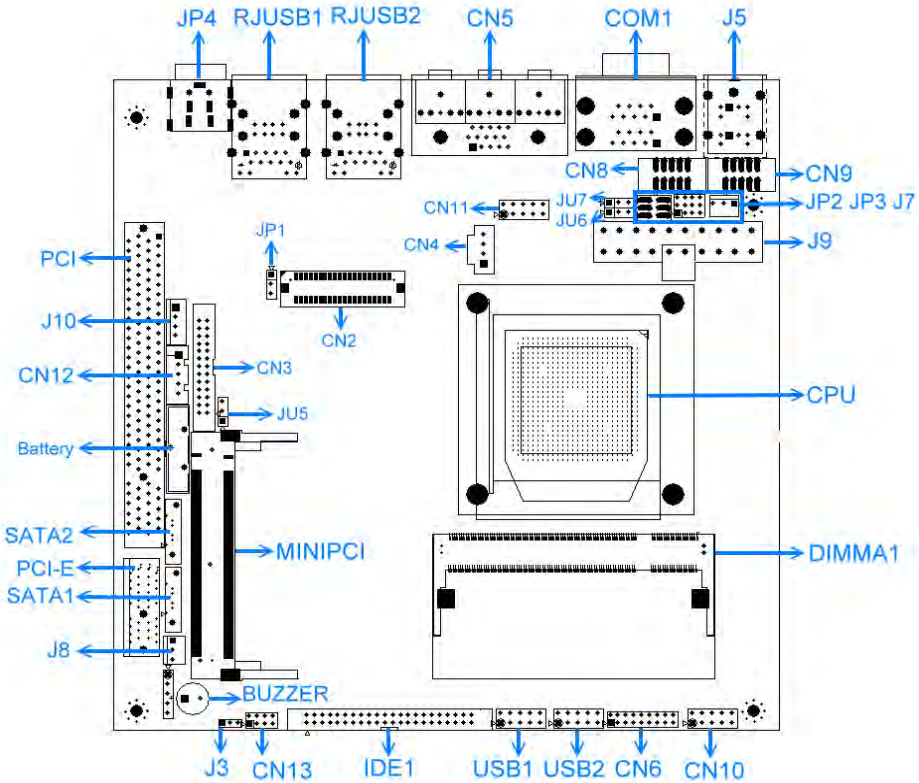

# Solder Side

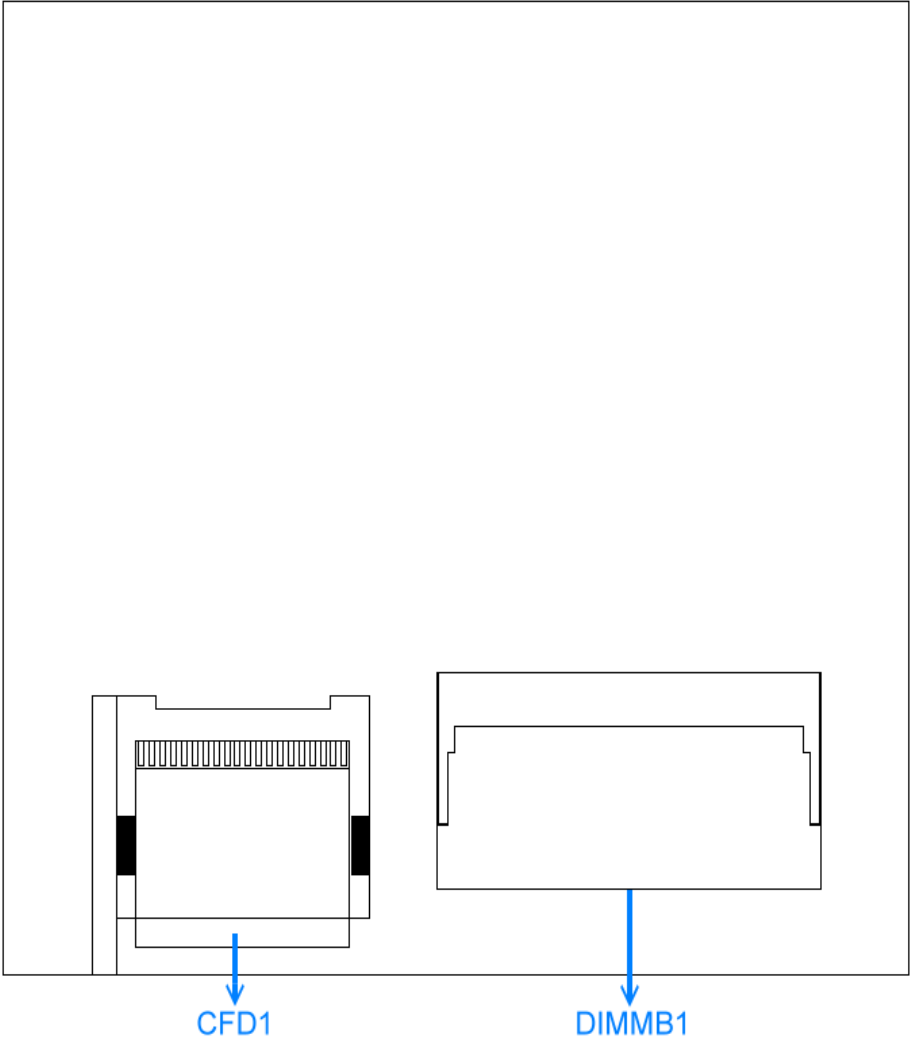




---

J10	4 Pin Power Connector 12V limited 0.8A Output 5V limited 1A Output
J11	PCI Slot
JP4	DC Power Jack Connector
CFD1	CompactFlash Socket
COM1 Down	COM1 RS-232 Connector
COM1 Up	COM2 RS-232 / RS-422 / RS-485 Connector
DIMMA1	SoDIMM Slot
DIMMB1	SoDIMM Slot
IDE1	44pin IDE Connector
MPCI1	Mini - PCI Slot
RJUSB1 A / B	PCI-E Gigabit LAN / USB Connector
RJUSB2 A / B	PCI-E Gigabit LAN / USB Connector
USB1	USB1 Connector
USB2	USB2 Connector

---

# Jumpers Locations

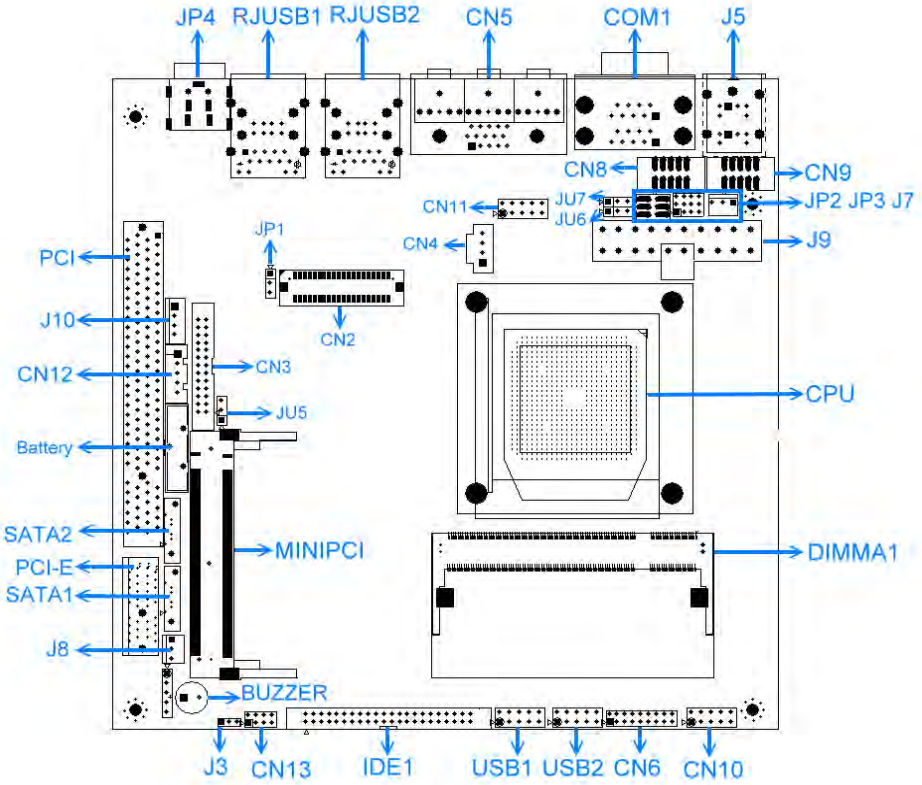

# List of Jumpers

---

J3 CF card Master / Slave

---

JP1 LVDS Panel Voltage Selection (+5V / + 3.3V )

---

JP2 COM2 RS232/422/485 Select

---

JP3 COM2 RS232/422/485 Select

---

JU5 Clear CMOS Selection

---


JU6 COM2 12V Voltage Select

---


JU7 COM1 5V Voltage Select

---


## Jumpers Setting

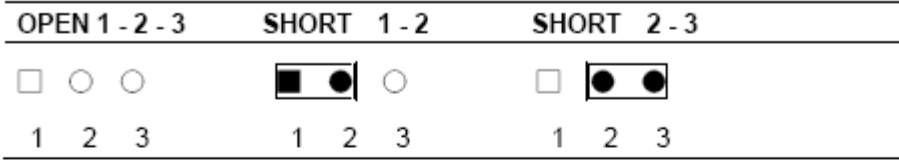


## LVDS Panel Voltage Selection ( JP1 )

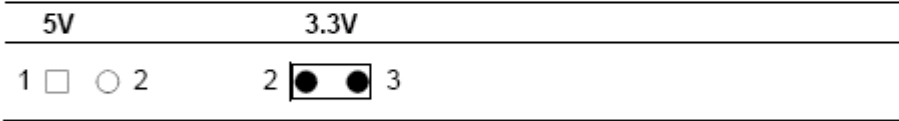


## Clear CMOS Selection ( JU5 )

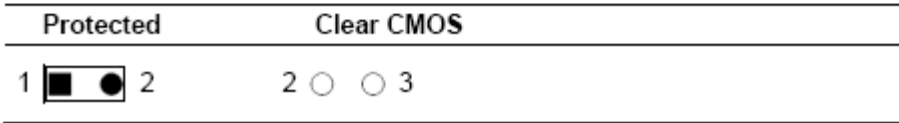



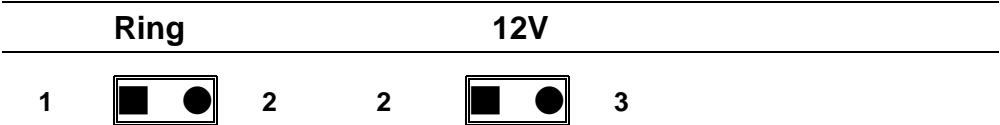

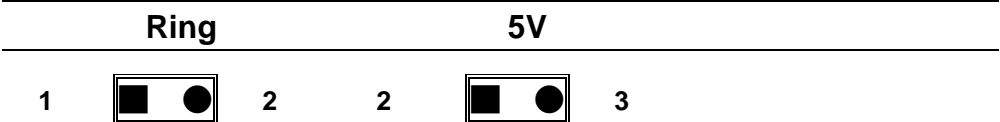

## COM2 Pin 9 Selection ( JU6 )



## COM1 Pin 9 Selection ( JU7 )















## CF Card Master/Slave Selection ( J3 )

Master			Slave		
					
1	2	3	1	2	3

## COM2 RS232/422/485 Selection ( JP3,JP2 )

COM2 SETTING RS232

JP3			JP2		
1			2	3	
4			5	6	
7			8	9	
10			11	12	






---

**COM2 SETTING RS422**

---

JP3

JP2

1 □ 2   31   24 ○ 5   63   47 ○ 8   95   610 ○ 11   12





---

**COM2 SETTING RS485**

---

JP3

JP2

1 □ 2   31   24 ○ 5   63   47 ○ 8   95   610 ○ 11   12

---

## DC Power Jack Connector ( JP4 )

Pin	Assignment	Pin	Assignment
1	+12V	2	GND
3	GND	4	N/C
5	ENABLK		

## LVDS Connector ( CN2 )

Pin	Assignment	Pin	Assignment
1	VCC	2	VCC
3	GND	4	GND
5	TXU0N	6	TXL0N
7	TXU0P	8	TXL0P
9	GND	10	GND
11	TXU1N	12	TXL1N
13	TXU1P	14	TXL1P
15	GND	16	GND
17	TXU2N	18	TXL2N
19	TXU2P	20	TXL2P
21	GND	22	GND
23	TXU3N	24	TXLCKN
25	TXU3P	26	TXLCKP
27	GND	28	GND
29	TXUCKN	30	TXL3N
31	TXUCKP	32	TXL3P
33	GND	34	GND
35	N/C	36	I2C_CLK
37	N/C	38	I2C_DATA

39	N/C	40	N/C
----	-----	----	-----

## DVI Connector ( CN3 )

Pin	Assignment	Pin	Assignment
1	TX1P	2	TX1N
3	GND	4	GND
5	TXCP	6	TXCN
7	GND	8	PVDD
9	N/C	10	N/C
11	TX2P	12	TX2N
13	GND	14	GND
15	TX0P	16	TX0N
17	N/C	18	HPD
19	SDA	20	SCL
21	GND	22	N/C
23	N/C	24	N/C
25	N/C	26	N/C

## VGA Display Connector ( CN5 )

Pin	Assignment	Pin	Assignment
1	RED	2	GREEN
3	BLUE	4	N / C
5	GND	6	GND
7	GND	8	GND
9	VGA_VCC	10	GND
11	N / C	12	CRT_DDCDATA
13	HSYNC	14	VSYNC
15	CRT_DDCCLK		

## GPIO Connector ( CN6 )

Pin	Assignment	Pin	Assignment
1	GPIO1-2	2	GPIO1-1
3	GPIO1-4	4	GPIO1-3
5	GPIO1-6	6	GPIO1-5
7	GPIO1-8	8	GPIO1-7
9	GPIO1-10	10	GPIO1-9
11	GPIO1-12	12	GPIO1-11
13	GPIO1-14	14	GPIO1-13
15	GPIO1-16	16	GPIO1-15
17	GND	18	+5V

## COM 3 RS-232 Connector ( CN8 )

Pin	Assignment	Pin	Assignment
1	DCD3#	2	RXD3
3	TXD3	4	DTR3#
5	GND	6	DSR3#
7	RTS3#	8	CTS3#
9	RI3#	10	N / C

## COM4 RS-232 Connector ( CN9 )

Pin	Assignment	Pin	Assignment
1	DCD4#	2	RXD4
3	TXD4	4	DTR4#
5	GND	6	DSR4#
7	RTS4	8	CTS4#
9	RI4#	10	N / C

## Front Panel Connector ( CN10 )

Pin	Assignment	Pin	Assignment
1	GND	2	Power Switch
3	BUZZER-	4	BUZZER+
5	HD_LED-	6	HD_LED+
7	POWER LED-	8	Power LED+
9	GND	10	Reset

## Front Audio Connector ( CN11 )

Pin	Assignment	Pin	Assignment
1	Front-R	2	Front-L
3	Surround-R	4	Surround-L
5	LFEOUT	6	CENOUT
7	SPDIFO-N	8	SPDIFI-N
9	GND	10	GND

## LVDS Inverter Power Connector ( CN12 )

Pin	Assignment	Pin	Assignment
1	+12V	2	GND
3	LVDS_BLON	4	CPIS_BLEN
5	+5V		

## IEEE 1394 Connector ( CN13 )

Pin	Assignment	Pin	Assignment
1	PWR	2	GND
3	TPB0-	4	TPB0+
5	TPA0-	6	TPA0+
7	GND	8	N/C

## PS2 KB / MS Connector ( J5 )

Pin	Assignment	Pin	Assignment
1	KB_DATA	2	N / C
3	GND	4	KB_VCC
5	KB_CLK	6	N / C
7	MS_DATA	8	N / C
9	GND	10	KB_VCC
11	MS_CLK	12	N / C

## CPU Fan Connector ( J7 )

Pin	Assignment
1	GND
2	12V
3	FAN Sense

## System Fan Connector ( J8 )

Pin	Assignment
1	GND
2	12V
3	FAN Sense

# ATX Power Connector ( J9 )

Pin	Assignment	Pin	Assignment
1	3.3V	2	3.3V
3	GND	4	5V
5	GND	6	5V
7	GND	8	N / C
9	5VSB	10	12V
11	3.3V	12	-12V
13	GND	14	PSON
15	GND	16	GND
17	GND	18	-5V
19	5V	20	5V

## 4 Pin Power Connector ( J10 )

Pin	Assignment
1	12V( Yellow ) Limited 0.8A Output
2	GND
3	GND
4	5V ( Red ) Limited 1A Output

## COM1 RS-232 Connector (COM1 DOWN)

Pin	Assignment	Pin	Assignment
1	DCD1#	2	RXD1
3	TXD1	4	DTR1#
5	GND	6	CSR1#
7	RTS1#	8	CTS1#
9	RI1#		

## COM2 RS-232/422/485 Connector (COM1 UP)

Pin	Assignment	Pin	Assignment
1	DCD2#(422TXD-/485DATA-)	2	RXD2(422RXD+)
3	TXD2(422TXD+/485DATA+)	4	DTR2#(422RXD-)
5	GND	6	DSR2#
7	RTS2#	8	CTS2#
9	RI2#		

## USB Connector (USB1, USB2)

Pin	Assignment	Pin	Assignment
1	USB_VCC	2	GND
3	USB4-	4	GND
5	USB4+	6	USB5+
7	GND	8	USB5-
9	GND	10	USB_VCC

## **CompactFlash Slot ( CFD1 )**

Standard CompactFlash Connector Type II

## **Mini-PCI Slot (MPCI1)**

Standard Mini-PCI Connector

## **PCI-E Gigabit LAN / USB Connector ( RJUSB1 )**

Standard RJ - 45 Connector / Standard USB Connector

## **PCI-E Gigabit LAN / USB Connector ( RJUSB2 )**

Standard RJ - 45 Connector / Standard USB Connector

## **SATA1 Connector ( J1 )**

Standard Serial ATA Connector

## **SATA2 Connector ( J2 )**

Standard Serial ATA Connector

## **CD-IN Connector ( CN4 )**

Standard CD-IN Connector

## **EIDE Connector ( J4 )**

Standard 44-pin EIDE Connector

## **PCI Connector ( J11 )**

Standard 120-pin PCI Slot Connector

2

**Serial Port4 Address**  
base

Allows BIOS to select serial port4  
address.

**Serial Port4 Mode**  
IRQ.

Allows BIOS to select serial port4

# Appendix

## Watchdog Timer

User could test watchdog timer function under “ DEBUG.EXE  
“ program as follows:

<b>DEBUG</b>	<b>Description</b>
O 2e 87	
O 2e 01	
O 2e 55	
O 2e 55	
O 2e 07	
O 2f 07	
O 2e 72	
O 2f c0	<b>C0: second ( 40: minute )</b>
O 2e 72	
O 2e 73	<b>Control second or minute</b>
O 2f 00 ~ FF	<b>O 2f 08 ( 8 second reset )</b>

---

Any advice or comments about our products and service, or anything we can help you with please don't hesitate to contact us. We will do our best to support your products, projects and business.



Address: Global American, Inc.  
17 Hampshire Drive  
Hudson, NH 03051

Telephone: Toll Free (U.S. Only) 800-833-8999  
(603)886-3900

FAX: (603)886-4545

Website: <http://www.globalamericaninc.com>

E-Mail: [salesinfo@globalamericaninc.com](mailto:salesinfo@globalamericaninc.com)

---